



InstaShade

GUTTER KIT ASSEMBLY

PARTS INCLUDED IN KIT



Gutter Kit



Clamp Kit

GUTTER KIT ASSEMBLY



A




B

Make sure the poles are locked in position with the spring loaded pin as shown in 'Image B'.




C

Unfold the gutter material as shown in 'Image C'.

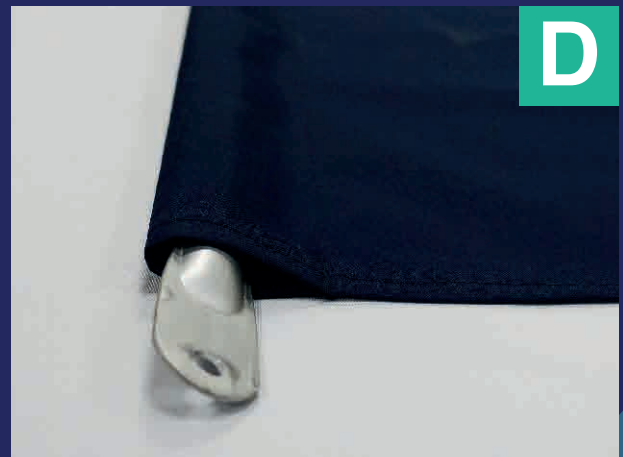

D

Slide one pole into each side of the material as shown in 'Image D'.

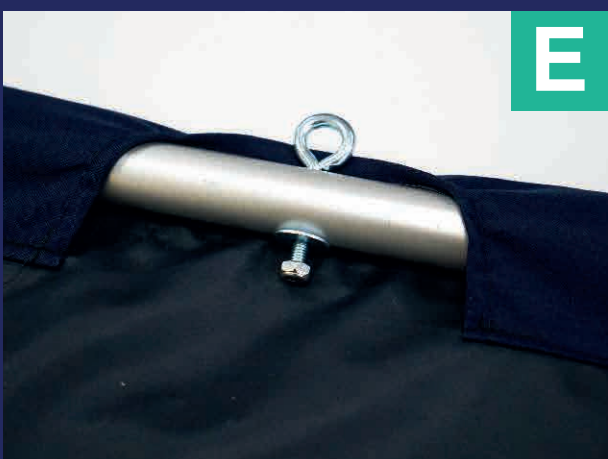


E

Where the pole is exposed in the middle of the material is a hole. Place the eyelet bolt through the hole securing with the washer and locking nut provided as shown in 'Image E'.

SECURING CLAMPS TO PARASOL




No need to remove the canopy, the clamps are designed to be fitted without its removal. Hook the inner section of the clamp into position on the parasol arm as shown in 'Image F'.

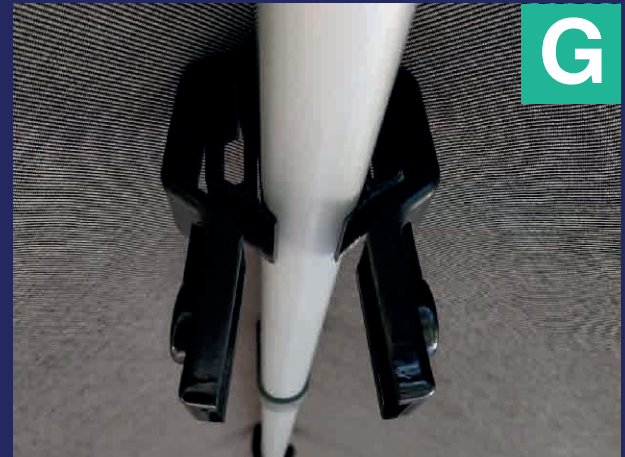


Hook the outer section of the clamp into position and fit over the inner section as shown in 'Image G'. Slide into position approximately 10-15cm from the outside edge of the parasol arm.



Place the carabina clip into position & insert the bolt with hex key, as shown in 'Image H'. Repeat on the remaining 2 arms of the parasol. Before installing your gutter measure the depth at each end. The end with the greater depth is the end of which any rain water will fall so pay attention to fit accordingly. The depth of the gutter may be adjusted by moving the brackets up or down the parasol arm.

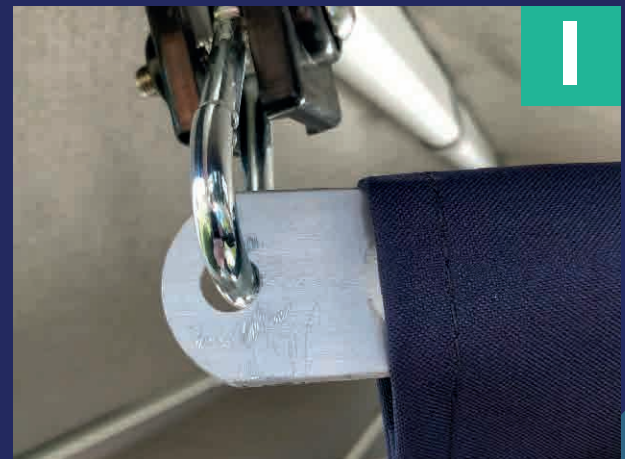

With one person at each end of the gutter, lift into position, open the carabina clip and hook the bar into the clip as shown in 'Image I'.

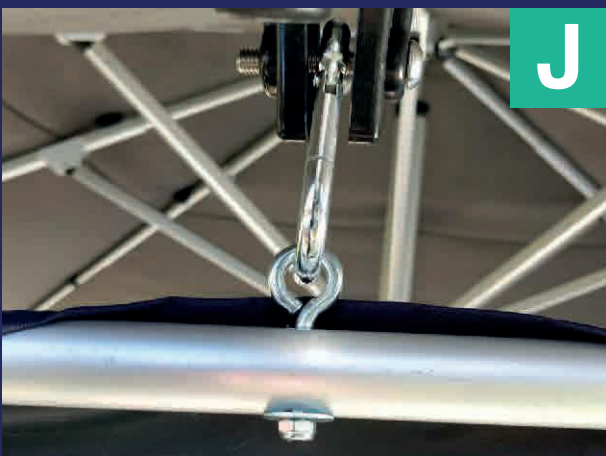

Repeat the process with the centre eyelet bolt as shown in 'Image J'. Repeat the process with the other bar on the adjoining parasol. Your gutter is now in position and ready for use.