



InstaShade

PARASOLS


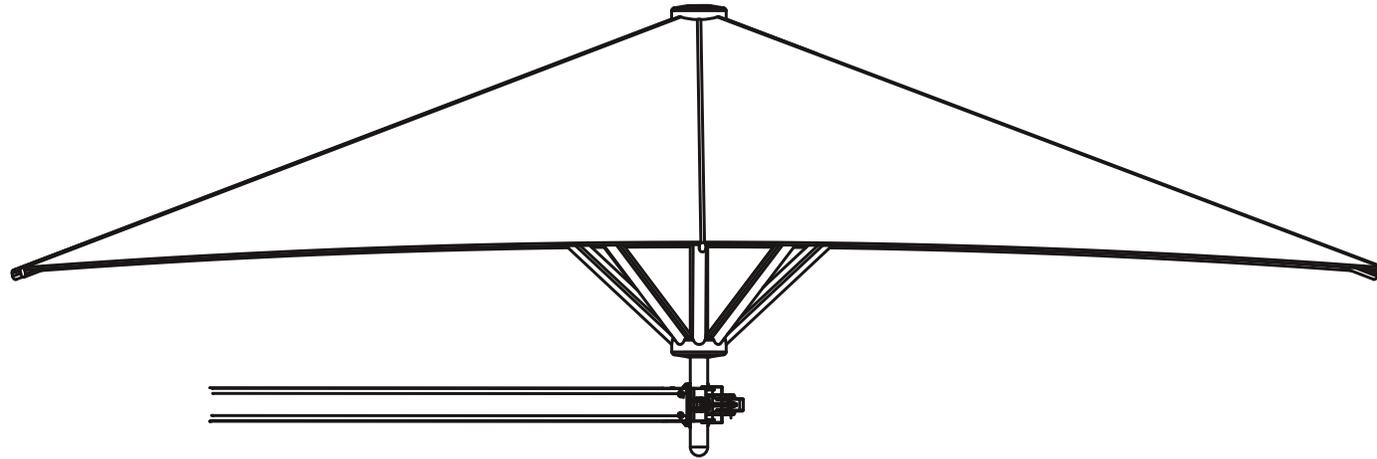


Wall Mounted Parasol
Installation Instructions


CONTENTS

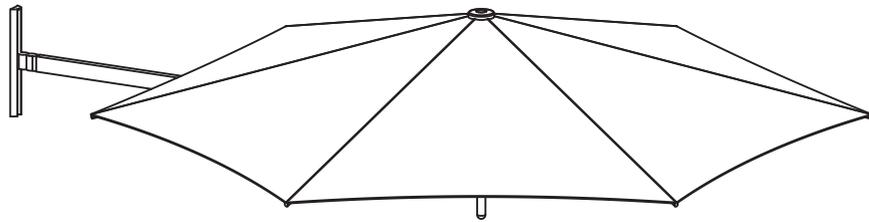


RECOMMENDED TOOLS

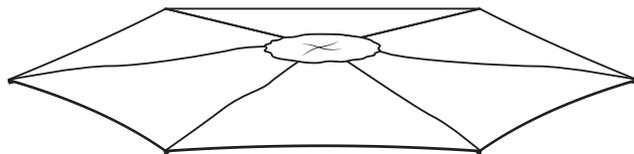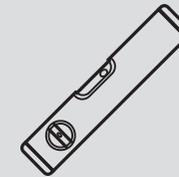


PFCOVER

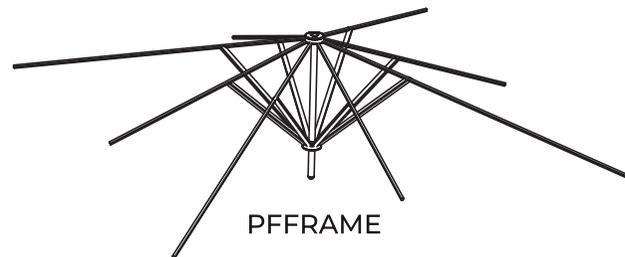

PFFRAME

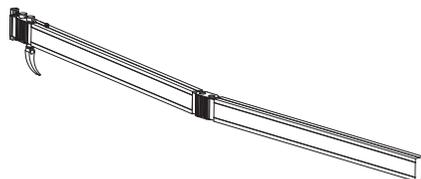


PFARM-CLASSIC OR PFARM-NEO

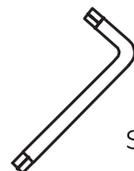

S5

MAKEY00060

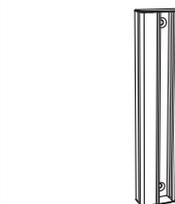


UM-WALLSUPPORT
NEO OR CLASSIC











PFPROTECTION
(OPTIONAL)

WALL MOUNT

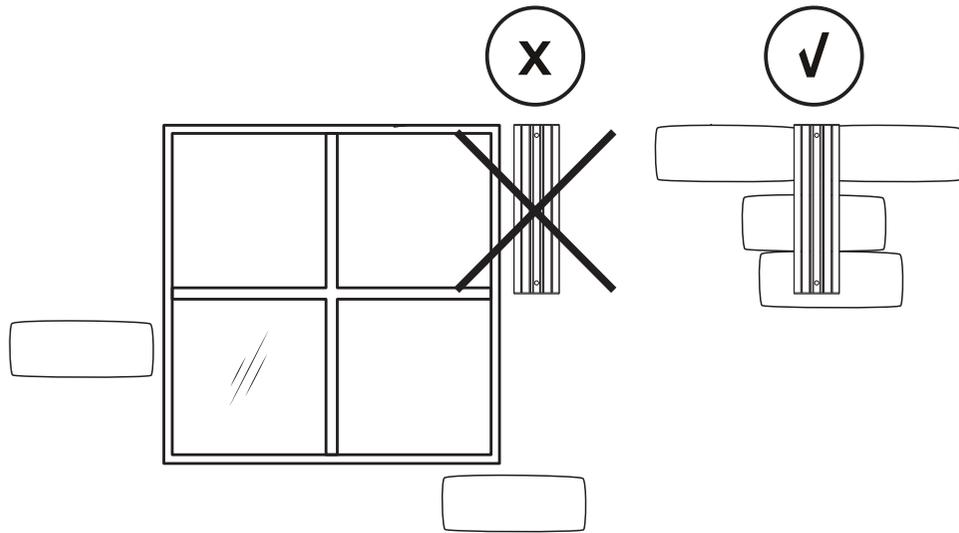


Not included - Niet inbegrepen - Pas inclus
 Nicht inbegriffen - No incluido - Non incluso

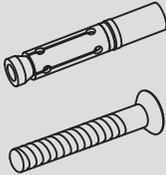 BRICK	 CONCRETE	 WOOD	 STEEL
			
Example: DIN 7991 M8	Example: Ø8 mm	Example: DIN 7997 Ø8 mm	Example: DIN 7991 M8

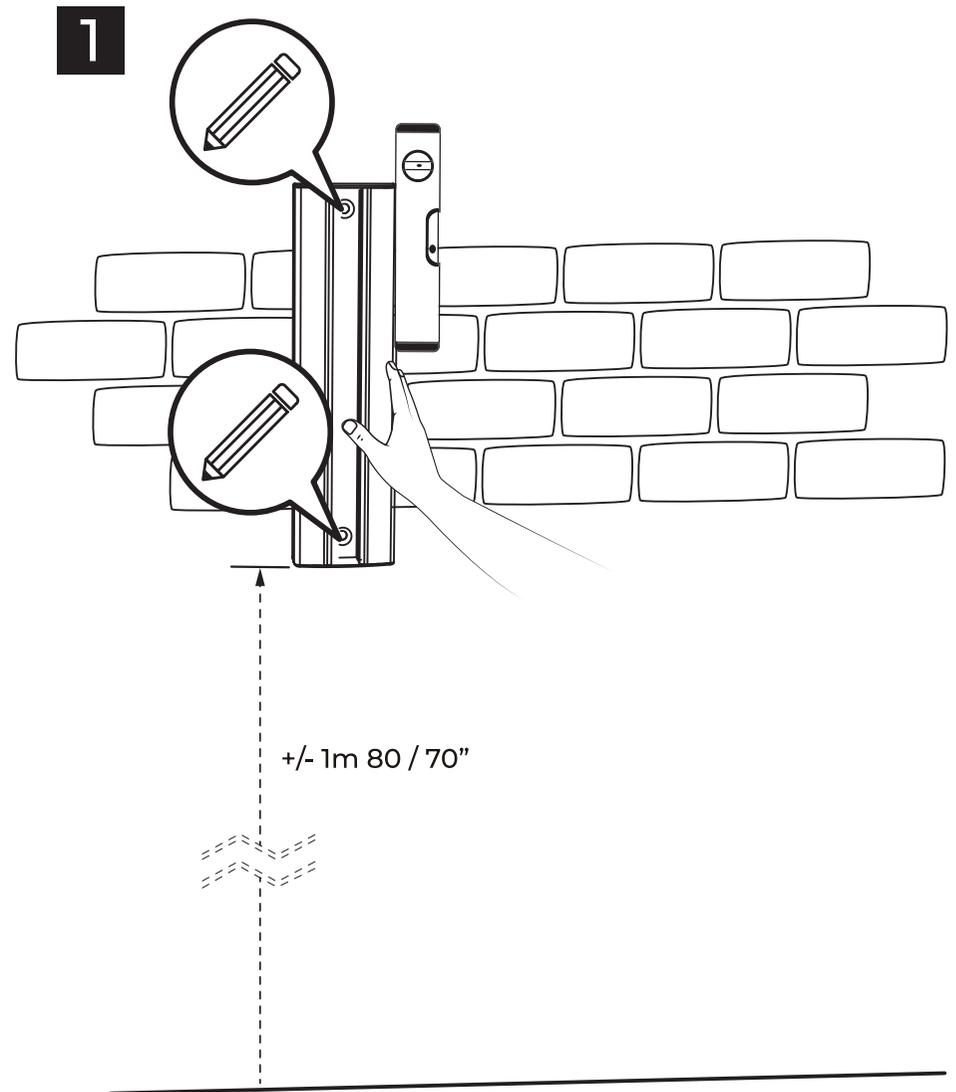


WALL MOUNT


2

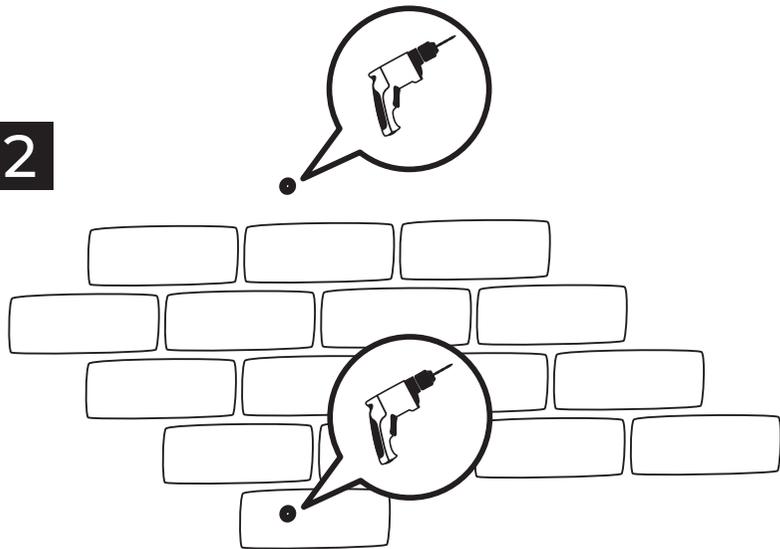

3

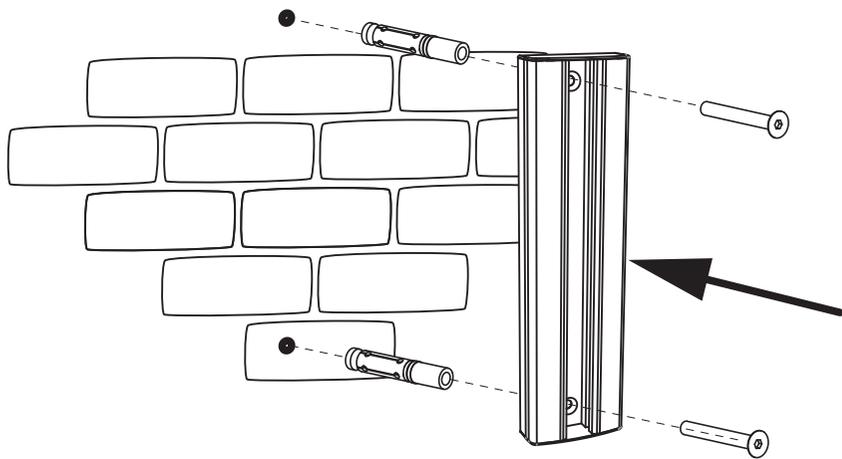


4

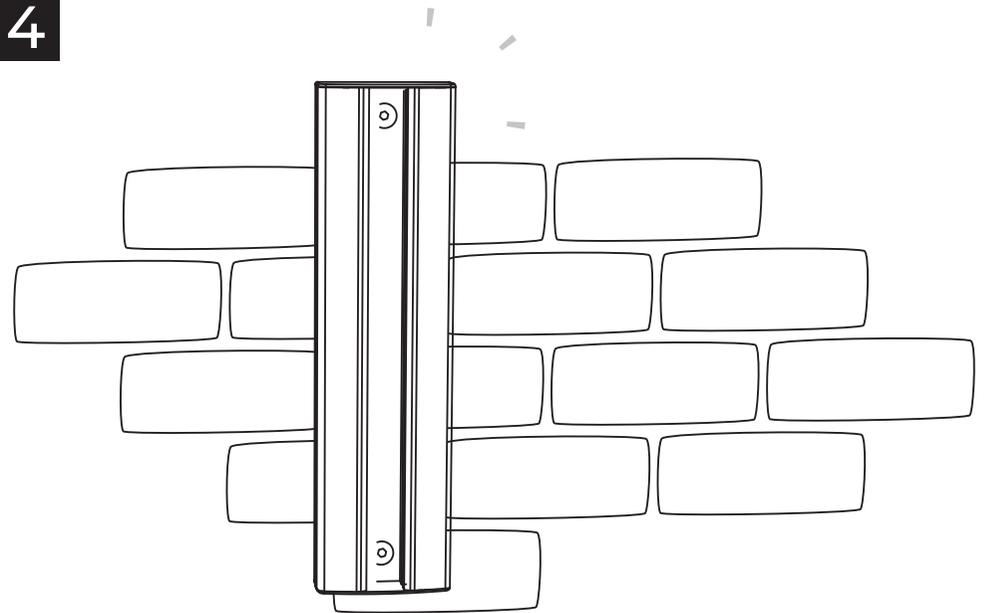


HOLDER INSTALLATION

1

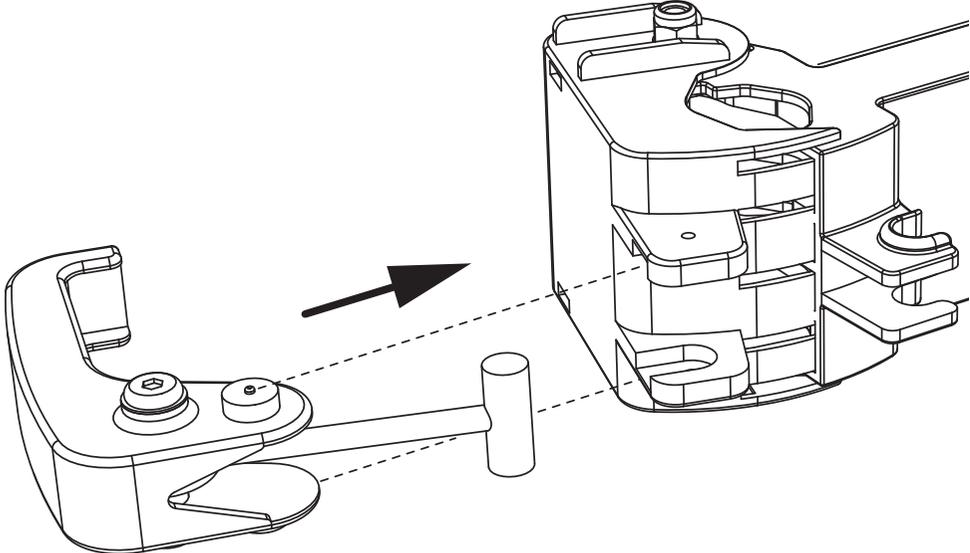

2

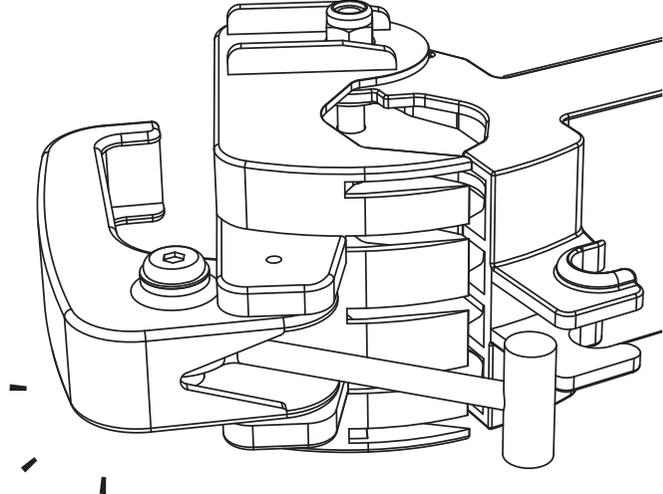


▶ P05 WALL MOUNTED NEO HOLDER INSTALLATION


▶ P06 WALL MOUNTED CLASSIC HOLDER INSTALLATION

NEO HOLDER INSTALLATION


3

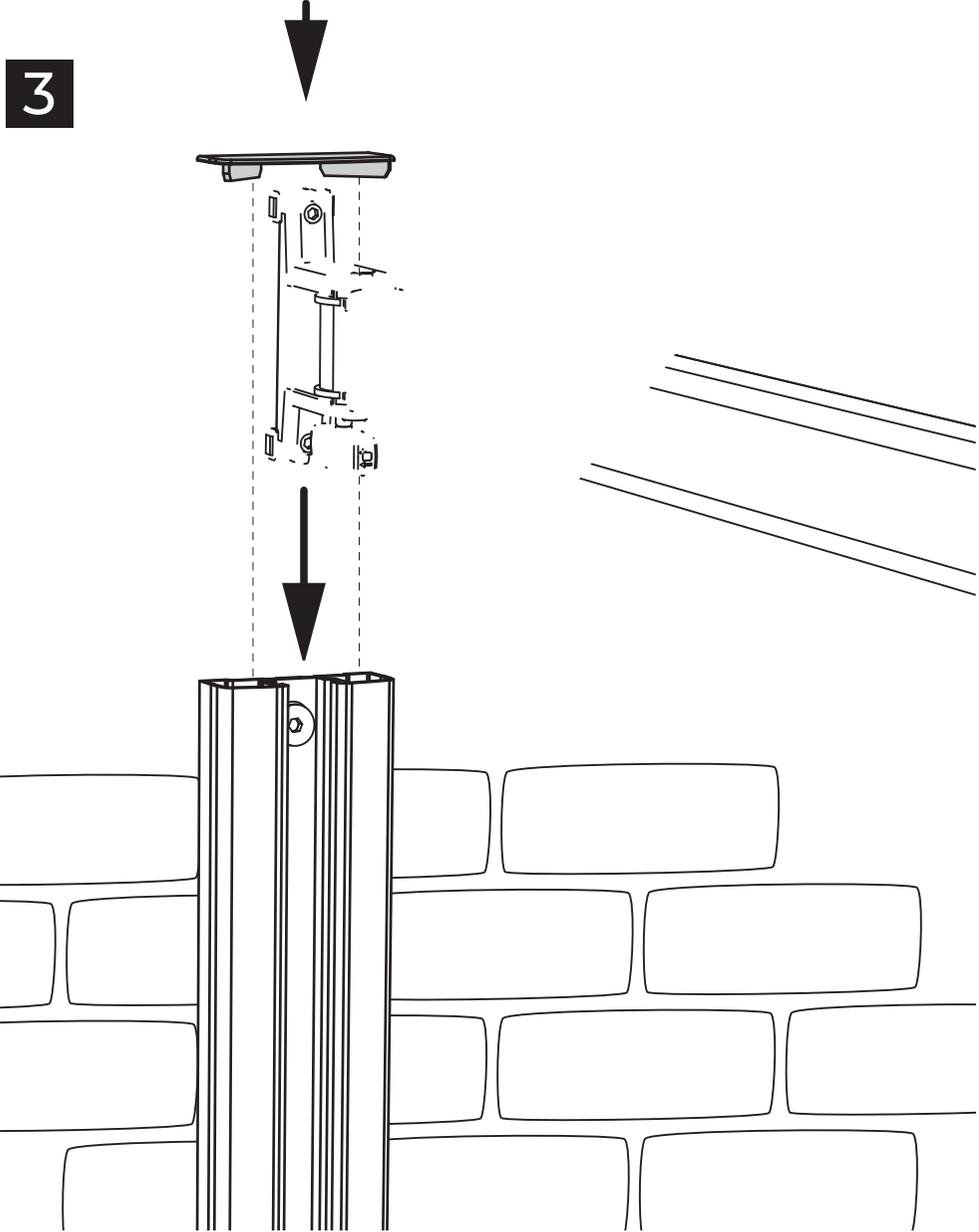


4

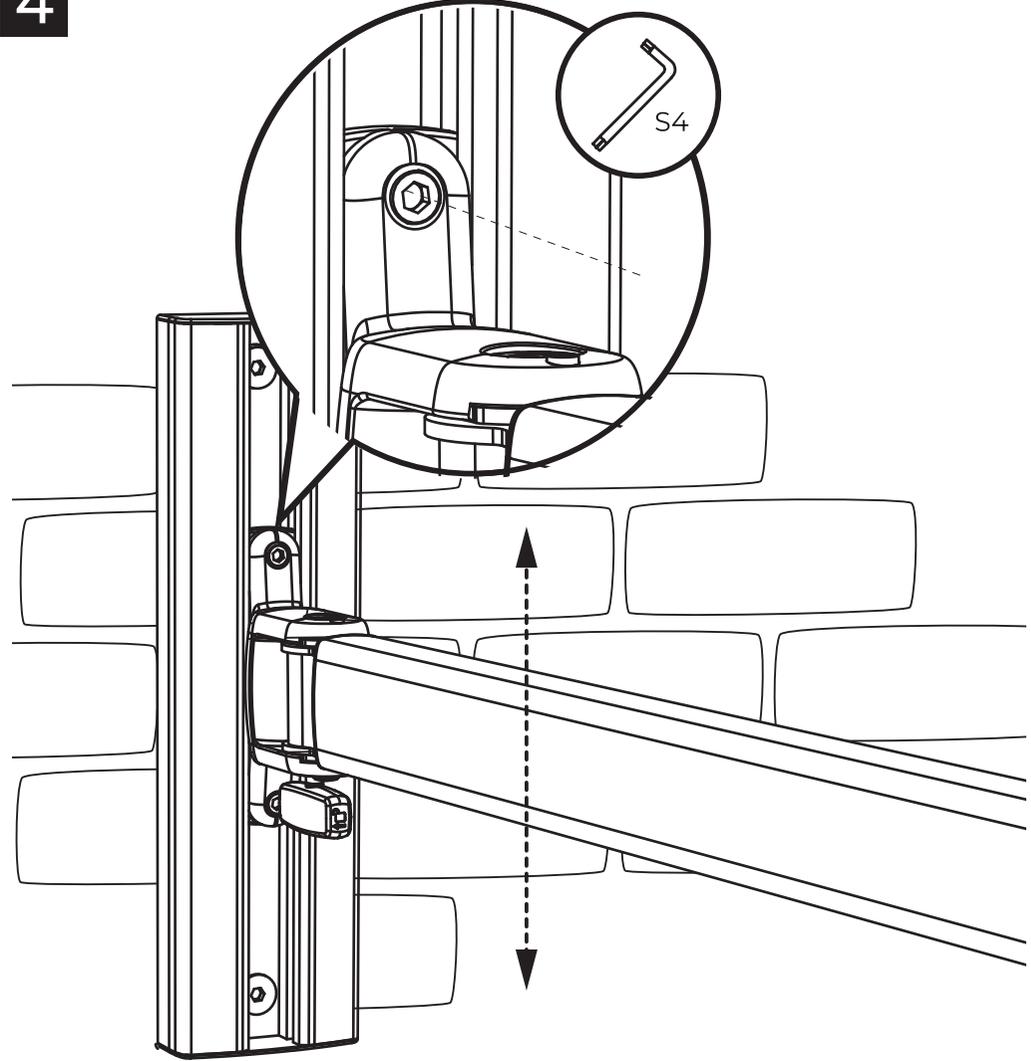


CLASSIC HOLDER INSTALLATION

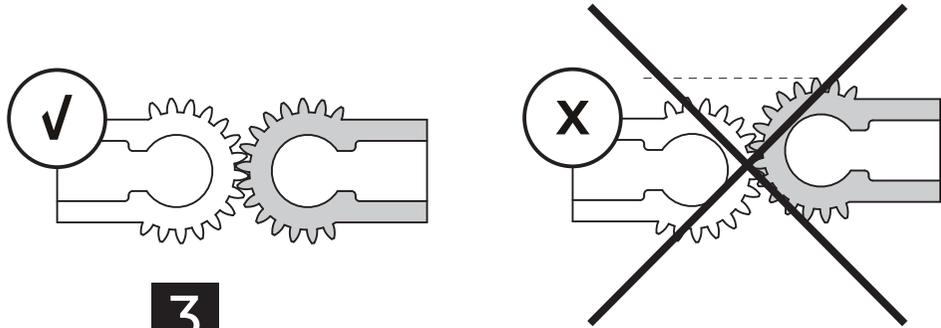

3

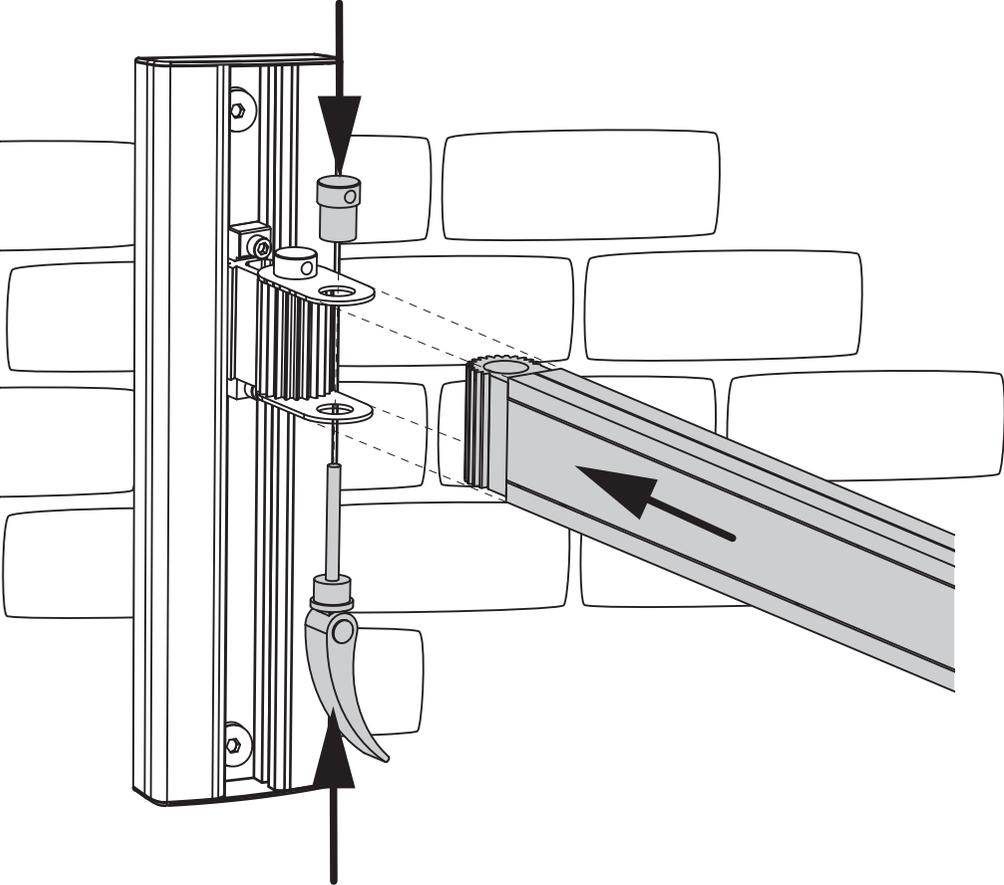

4

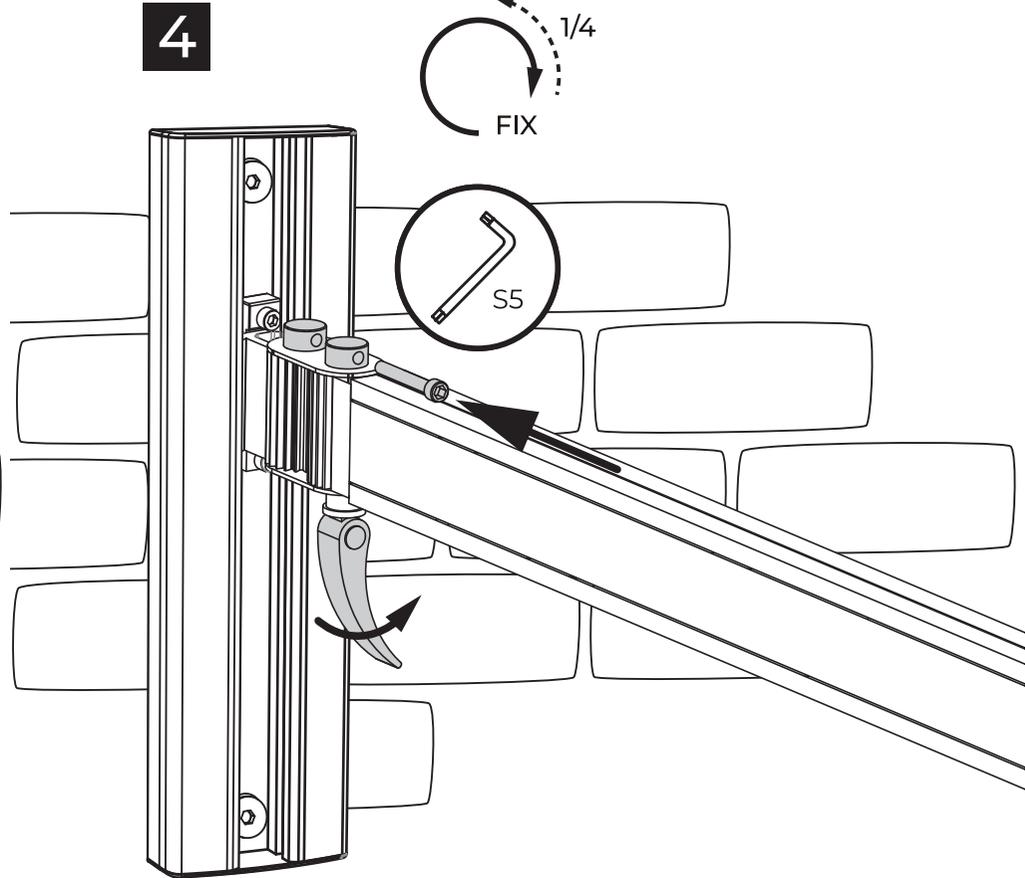

InstaShade
PARASOLS